



Adhesive Spreader/Roller

- Easy to use, cost effective adhesive spreader
- Spreads PVA, contact adhesive, rok fast, etc
- 5" roller/spreader (complete with spare roller)
- Spreader / roller unit stand
- Adhesive / roller brake
- Adhesive reservoir capacity: 0.5kg maximum
- Coverage varies depending on type of adhesive used

Art No: 0891 184

Qty: 1

Directions:

1. Ensure unit is sitting correctly on the stand
2. Ensure roller brake is selected on
3. Fill reservoir with chosen adhesive
4. Lift unit off stand, disengage roller brake and roll adhesive out. (The roller brake can be selected to enable the adhesive to be spread evenly without adhesive being applied. This will allow you to achieve the adhesive coat weight and coverage of your choice.)
5. Clean unit reservoir and rollers with appropriate clean up method for the adhesive used.